

Start safely


Mount Safely

Never mount a loader unless the lift arms are lowered or locked by a lift arm support device.

When you get on or leave the loader, always:


- Maintain a three-point contact with the steps and grab handles provided. (14)
- Face the loader.
- Never jump on or off the loader. Never attempt to mount or dismount the loader when moving.

Do not use a steering or control lever as a handhold when you enter or leave the loader.

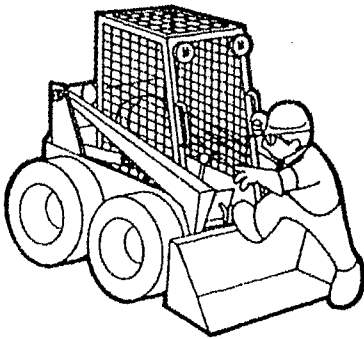

14
RIGHT

15
WRONG

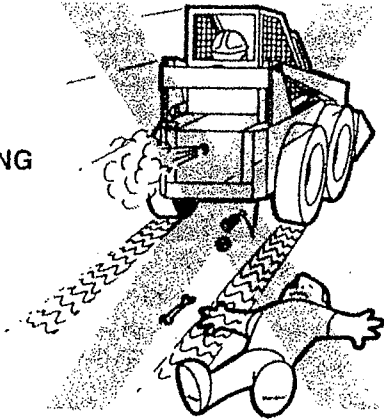

Warn Personnel Before Starting

Before starting, walk completely around the loader. Make sure no one is under the loader, on it, or close to it. Let other workers and bystanders know you are starting up and don't start until everyone is clear of the loader. (15)

Look out for others.


17

Park safely

Safe Shutdown


The detailed shutdown procedure is given in your manufacturer's manual(s). In general, the procedure should include the following:

- Stop loader
- Lower the bucket or other attachment flat on the ground.
- Position controls in neutral.
- Engage parking brake.
- Idle engine for short cool-down period.
- Stop engine.
- Cycle hydraulic controls to eliminate pressure.
- Raise operator seat bar(s) (if so equipped).
- Check that controls are locked in neutral (if so equipped).
- Unbuckle seat belt/restraint.
- Remove ignition key and lock covers and closures. (40)

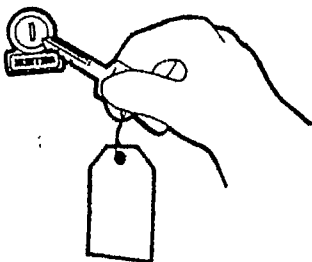

40
RIGHT

41
RIGHT

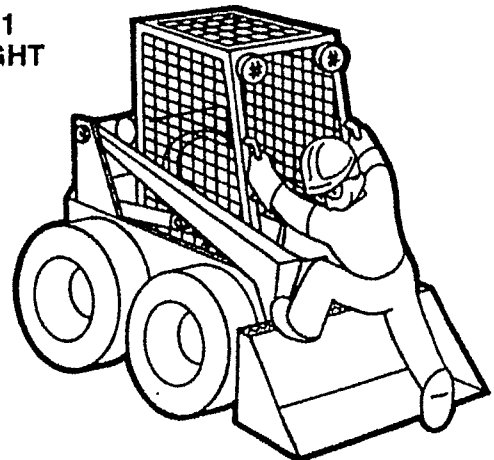

- Shut off master electric switch (if so equipped).
- When you leave the loader, always maintain a three point contact with the steps and grab handles. Face the loader as you dismount. Never jump off machine. (41)
- Be careful of slippery conditions on steps and grab handles when leaving loader.
- Block wheels if on a slope or incline.

Don't give anyone the key to an accident.

31

15. OPERATION

26. CHECK OPERATION OF INCHING PEDAL (TORQFLOW TRANSMISSION LIFT TRUCK)

- Depress the pedal slightly (partially engage the transmission) and check that it is possible to carry out inching.
- Check that the lift truck stops when the pedal is completely depressed.

27. CHECK FOR ABNORMAL NOISE, ABNORMAL SMELL

Check that there is no abnormal noise or abnormal smell when traveling at low speed.
Check for odor of LPG, on LPG equipped lift trucks.

15.1.4 CHECKS WHILE OPERATING CONTROL LEVERS

28. CHECK OPERATION OF WORK EQUIPMENT

Operate the work equipment control levers from the operator's seat and check that the forks can be raised and lowered and that the mast can be tilted forward and back smoothly.
If there is any abnormality, please contact your Komatsu Forklift distributor immediately.

29. CHECK FOR ABNORMAL NOISE, ABNORMAL SMELL

Operate the work equipment control levers from the operator's compartment and check that there is no abnormal noise or abnormal smell during travel.


15.2 MOUNTING/DISMOUNTING



WARNING

- Always mount/dismount only after first completely stopping the lift truck.
- NEVER jump on or off the lift truck as this is very dangerous.

Mount and dismount facing the lift truck, using the foot of the head guard as shown in the illustration.

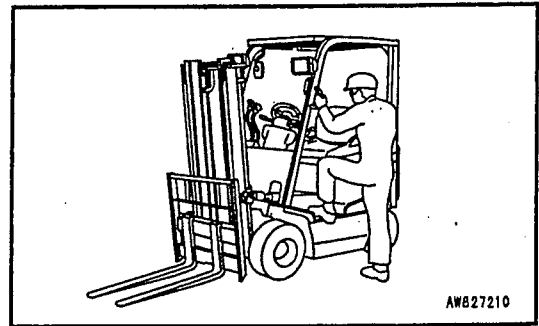

WARNING

MOUNTING AND DISMOUNTING

- NEVER jump on or off the lift truck.
- When getting on or off the lift truck, always stop the lift truck and use the handrails and steps to ensure that you support yourself.
- Never hold any control levers or the steering wheel when getting on or off the lift truck.
- If there is any oil, grease or mud on the handrails or steps, wipe it off immediately. Always keep these parts clean. Repair any damage.



AL187320